


MINIATURE OUTPUT PENTODE 6.3V INDIRECTLY HEATED

SEPTEMBER, 1953

mm.

BASE CONNECTIONS AND VALVE DIMENSIONS

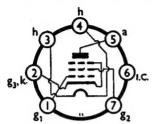

Base: B7G

Tubular. Bulb:

Overall length: 49-55 mm. Seated length: 43-49 mm. Max. diameter: 19

View from underside of base.

RATING

Pentode connection

$V_{\mathbf{h}}$	6.3		V
Ih	0.2		A
$\overline{V_{h-k}}$ (pk)	150	max.	v
Va	250	max.	V
V_{g2}	250	max.	\mathbf{v}
Pa	4	max.	\mathbf{w}
Dø2	0.6	max.	\mathbf{w}
	£130		$\mathbf{k} \Omega$
r_a at $V_a = V_g 250 I_a = 16 mA$	1 2⋅6		mA/V

Triode connection

$$\begin{array}{c} V_{a~g2} & 250 & \max . & V \\ P_{a~g2} & 4.6 & \max . & W \\ \mu & \\ r_{a} & \\ g_{m} \end{array} \right\} at~V_{a~g2} = 250~I_{a} = 16~mA ~ \begin{cases} 11.5 \\ 3.85 \\ 3 \end{cases} \qquad \qquad k\Omega \\ mA/V \\ \end{array}$$

CAPACITANCES (of cold unscreened valve)

Ca-all	4.2 pF	Cg1-all	3.2 pF	$c_{a-gl} < 0.5 pF$
--------	--------	---------	--------	---------------------

TYPICAL OPERATION

Single valv

valve.	Glass A.	Pentode connection.	
V_a		250	v
V_{g2}		250	\mathbf{v}
Ia		16	mA
		2.4	mA
$egin{array}{l} \mathbf{I_{g2}} \\ \mathbf{R_k} \end{array}$		680	Ω
vin (pk	c)	7.5	v
R _L	′	16	$k\Omega$
Pout		1-4	W
D		10	%



Push-pull. Class AB1. Self bias.

Data per pair unless otherwise stated.

V_a	250	\mathbf{v}
V_{g2}	250	v
$V_{g1}(0)$	15 approx.	\mathbf{v}
$I_a(0)$	22	mA
Ia (max. sig.)	25.6	mA
$I_{g2}(0)$	3.2	mA
Ig2 (max. sig.)	8.2	mA
$R_{\mathbf{k}}$	600	Ω
v_{in} (pk) (g ₁ -g ₁)	34	v
R_L $(a-a)$	24	$k\Omega$
Pout	4	\mathbf{W}
D	3.2	%

Push-pull. Class AB1. Fixed bias.

Data per pair unless otherwise stated.

V_a	250	v
V_{g2}	250	V
V_{g1}	19	V
Ia (0)	10	mA
Ia (max. sig.)	32	mA
$I_{g2}(0)$	1.3	mA
Ig2 (max. sig.)	9	mA
Vin (pk) (g1-g1)	37	V
R_L	20	$k\Omega$
P_{out}	4.8	W
D	3.3	%

GRID RESISTOR

The maximum permissible D.C. resistance between control grid and cathode is limited to 470 k Ω \pm 20% with auto-bias, and 100 k Ω \pm 20% with fixed bias operation.

MOUNTING

Any position.

RETAINING

A retaining device should be used.

SCREENING

No internal or external screening is fitted to the valve.

VENTILATION

Free air circulation around the bulb should be allowed.

MICROPHONY

Although of a very low order, equipment should be designed to minimise microphony.

